

PHOENIX WASHERLESS CARTRIDGE REPLACEMENT

You may need several of these tools:

- Allen wrench (5/16 or 7/32)
- Channel locks
- » Crescent wrench
- » Flathead screwdriver
- » Phillips head screwdriver
- Pipe joint compound
- Soft cloth
- Teflon tape
- No tools necessary

Part key:

- | No. | Description |
|-----|---------------------------------|
| 1 | Index Button |
| 2 | Handle Screw |
| 3 | Handle |
| 4 | Bonnet retaining ring |
| 5 | Bonnet lock (not on all models) |
| 6 | Cartridge |

1. Always turn off water supply. Turn hot and cold water full on to relieve line pressure.
2. Using a flathead screwdriver or knife, lift off index button, remove handle screw using a phillips head screwdriver, remove handle.
3. With the flathead screwdriver gently pry up bonnet retaining ring and bonnet lock.
4. Unscrew the cartridge counterclockwise with an 8" or 10" crescent wrench.
5. Replace cartridge. **NOTE: CROSS THREADING OR OVER TIGHTENING WILL STRIP THE THREADS IN THE FAUCET BODY AND THE FAUCET WILL HAVE TO BE REPLACED**

TIP: Open the cartridge slightly to make installation easier.

6. Replace handle.
7. Turn on water, check for leaks.

